



Operating Instruction (External Receiver)

Product parameters

Input voltage: DC12-DC24V

Maximum output current: AC220V1A

Note: When the DIP switches are all in the OFF position below, the default is remote three-key mode


Dip switch function:

1. Remote control single key
- 2, normally open normally closed OFF no power output, there is a signal output 1 seconds ON power has output, and the signal is disconnected for 1 second
- 3, latch output ON signal has been output
4. Roll brake mode
5. Output direction ON converts THE output of RL1 and RL2 and the corresponding remote-control keys
6. Four relay output modes

Note: Dip switches can be set in combination and have different functions.

Remote control: Press the STUDY button for 2 seconds, let go, and press the stop button of the remote control immediately. After about 2 seconds, the receiver will ring, indicating successful learning. Add the next one in the same way. If it is a remote-control single key function, which remote control button increases with that key to control.

Remote delete: Hold down the STUDY key for more than 8 seconds and the receiver will ring to clear all remote controls.

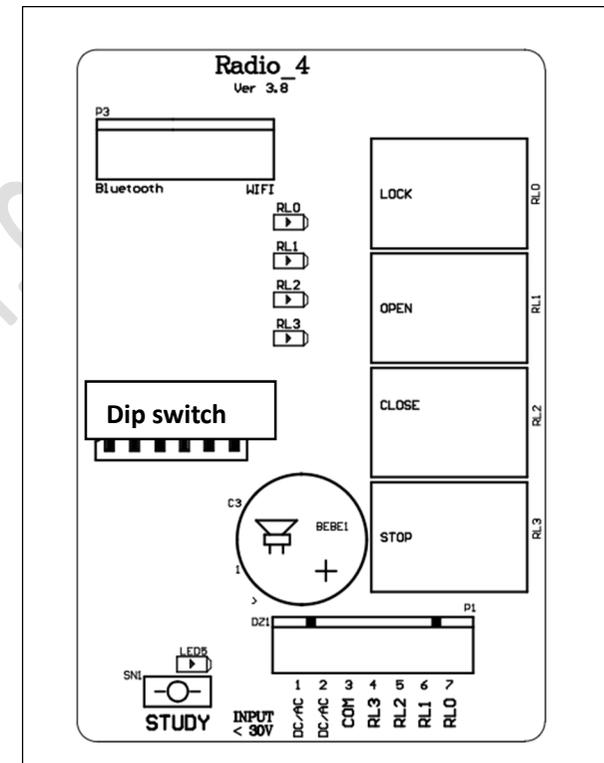

Connection mode:

- | | | |
|---|-------|--|
| 1 | DC/AC | power input |
| 2 | DC/AC | power input |
| 3 | COM | Outputs public cables |
| 4 | RL3 | stop key output or remote control single key signal output |
| 5 | RL2 | Key output |
| 6 | RL1 | Open key output |
| 7 | RLO | lock key output
(4 effective in relay mode) |